



Samsung Portable Dualband Tri-Mode Backplate Replacement

Use this repair guide to replace the backplate on a Samsung Portable Dualband Tri-Mode.

Written By: Kali Kupp



INTRODUCTION

The removal of the backplate may be necessary in the event that the backplate becomes damaged. The removal of the backplate is a prerequisite for reaching the electrical components of the phone. This guide addresses both of these issues.



TOOLS:

- [Tweezers](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Slide the battery out from the battery compartment on the back of the phone.

Step 2 — Antenna



- Unscrew the antenna top.

Step 3



- Clasp the antenna with tweezers and push toward the top.
- Remove the antenna.

Step 4 — Backplate



- Remove the four screws (3 mm) from the battery compartment.
- Press the release buttons located on the side of the phone while gently prying the back plate off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 10:45:13 PM.